


Pop Up Gazebo Instructions




Installation


Place gazebo in centre of required area. Remove cover. Have 2 people stand on opposite sides, grasp two outer legs, lift off of ground and step backwards, stopping at arms length.

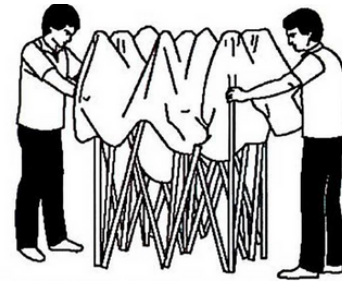


Grasp the bottom of the diamond, on opposite sides. Lift up and step backwards until shelter is fully opened, being careful not to pinch fingers.

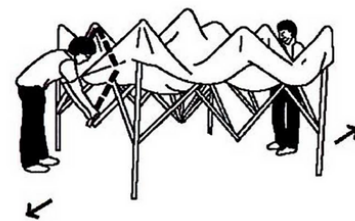

Each person should move to middle leg of one side. Grasp at bottom of diamond, lift up and step backwards at the same time until gazebo is fully opened, being careful not to pinch fingers at end of truss.

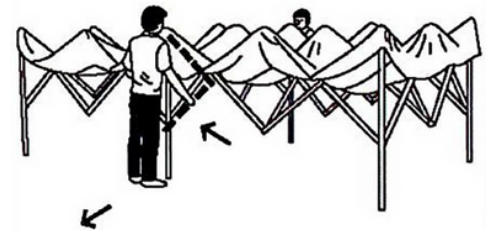

Engage the auto slider at each corner by pushing up with one hand while holding down top of leg with the other hand. Snap Button will engage in groove. Repeat on all other legs.

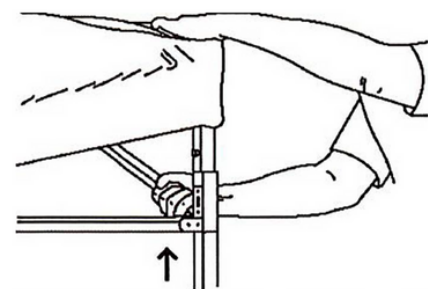

Lift two adjacent outer legs up and pull out the inner legs until snap locks. Repeat on all legs. Raise or level the gazebo using adjustment holes found near bottom of each outer leg.




Pop Up Gazebo Instructions




Taking Down Your Gazebo

Lift two outer legs slightly, depress snap button, telescope inner legs up into outer legs. Repeat on opposite side.

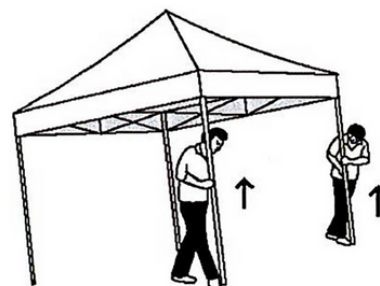


Release auto slider at each corner by pushing Snap-Button to release pressure on slider. Repeat on all four corners.

RELEASE
SNAP-BUTTON

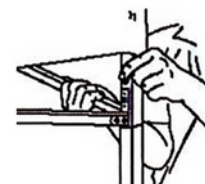

Grasp top of diamond on opposite sides, lift up, shake gazebo a little while stepping towards partner until unit is $\frac{3}{4}$ closed. Grasp two outer legs, push together to fully close (do not pinch fingers). Put on cover bag.

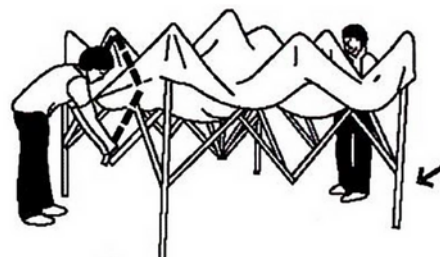

Anchoring & Weighting

- If your gazebo is not pegged or weighted down correctly, it may pose a serious health and safety risk.
- When using on a grassed areas, always ensure it is anchored down correctly using the pegs and ropes supplied.
- If used on hard standing ground, you will require a weighting system. We recommend at least 13kg per leg (1 x full sandbag weight or 1 x jigsaw weight).
- User discretion is advised during bad weather. If in doubt, take the unit down.
- Never leave the unit unattended during bad weather, before it is anchored/weighted correctly, or leave overnight if storms or high winds are likely.
- Any damage caused due to improper use will not be covered under warranty.

Pop Up Gazebo Instructions



Caring For Your Gazebo

All materials are treated to withstand the changeable British weather. It is important however, to follow our safety & care guidelines to ensure products are used correctly.

If units are not maintained, erected and dismantled as instructed, they may be damaged. Please note, improper use can cause a serious health and safety risks.

We recommend the canopy is removed from the frame after each use. Please note that if the canopy is left attached to the frame for storage, it is likely to cause damage to the fabric which will not be covered under warranty.

If it is not possible to dry out your gazebo and it's accessories before packing away after use, please ensure that they are unpacked and dried out within 24 hours.

Transport & Storage

- We strongly advise the canopy is removed from the frame after each use. This limits the chance of avoidable damage occurring to the fabric.
- If the canopy is stored whilst attached to the frame, the movement and vibrations during transportation can cause the metal to rub against the fabric. This can cause the fabric to thin out, increasing the risk of leaks.
- It is recommended that all fabric is dried out before it is stored away. If this is not possible, please ensure the canopy and sidewalls are unpacked and dried out within 24 hours to minimise the risk of mould and damage to the materials.
- When handling your gazebo frame, do not drag the units across the ground.
- Load into vehicles in a vertical position and secure with appropriate straps/ropes. Upgraded heavy duty tie down kits are available upon request at additional cost
- Damage by improper transportation and/or storage will void the warranty.

Safety & Maintenance Information

- **Windy Conditions:** Use stake kit or weight bag set
- **Heavy Wind:** Take the gazebo down
- **Wet Fabric:** Let your gazebo dry before closing
- **Storage:** Use cover bag when not in use
- **Cleaning:** Use mild detergent and water
- **Rain:** Do not leave gazebo unattended

Cleaning

We recommend your canopy and sidewalls are washed using a mild detergent and soft scrubbing brush.